



C-3PO Poké Ball


Assembly Guide

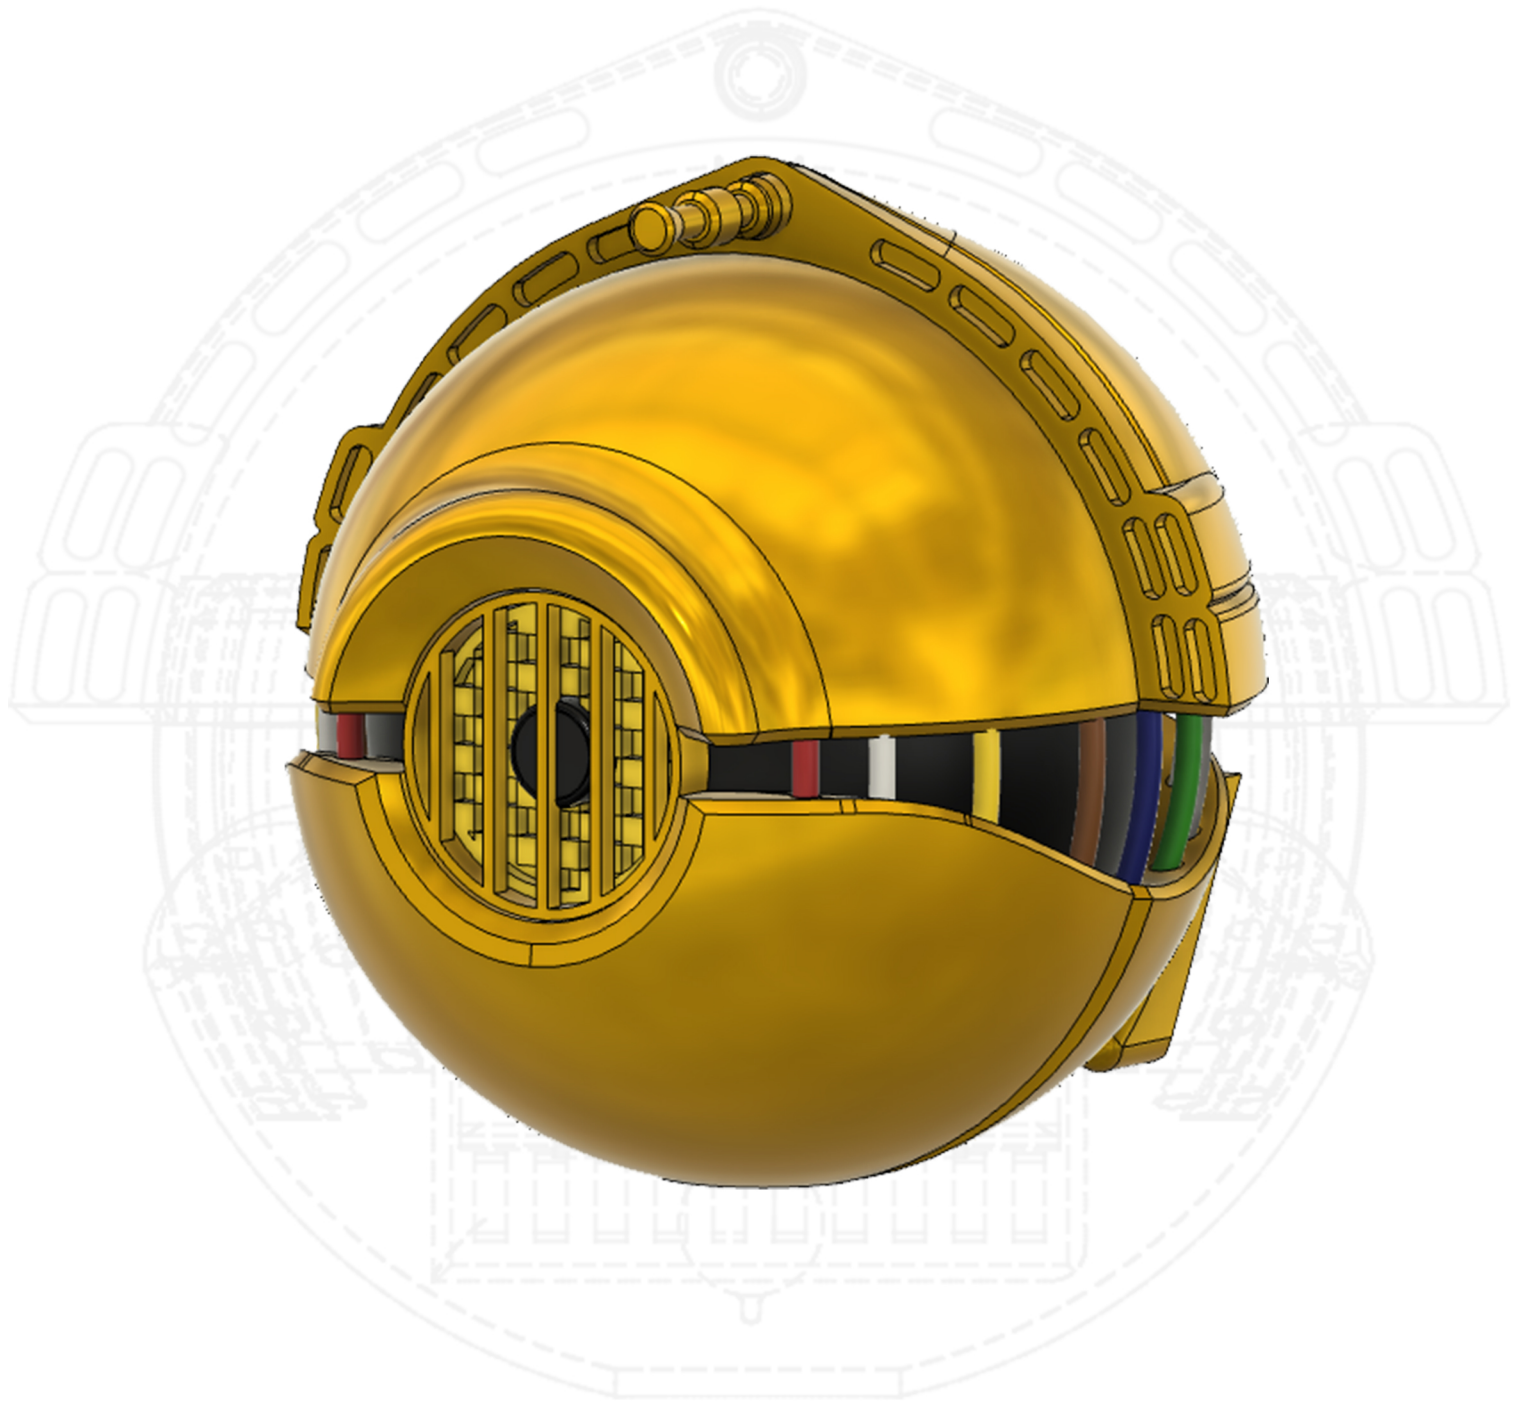

1

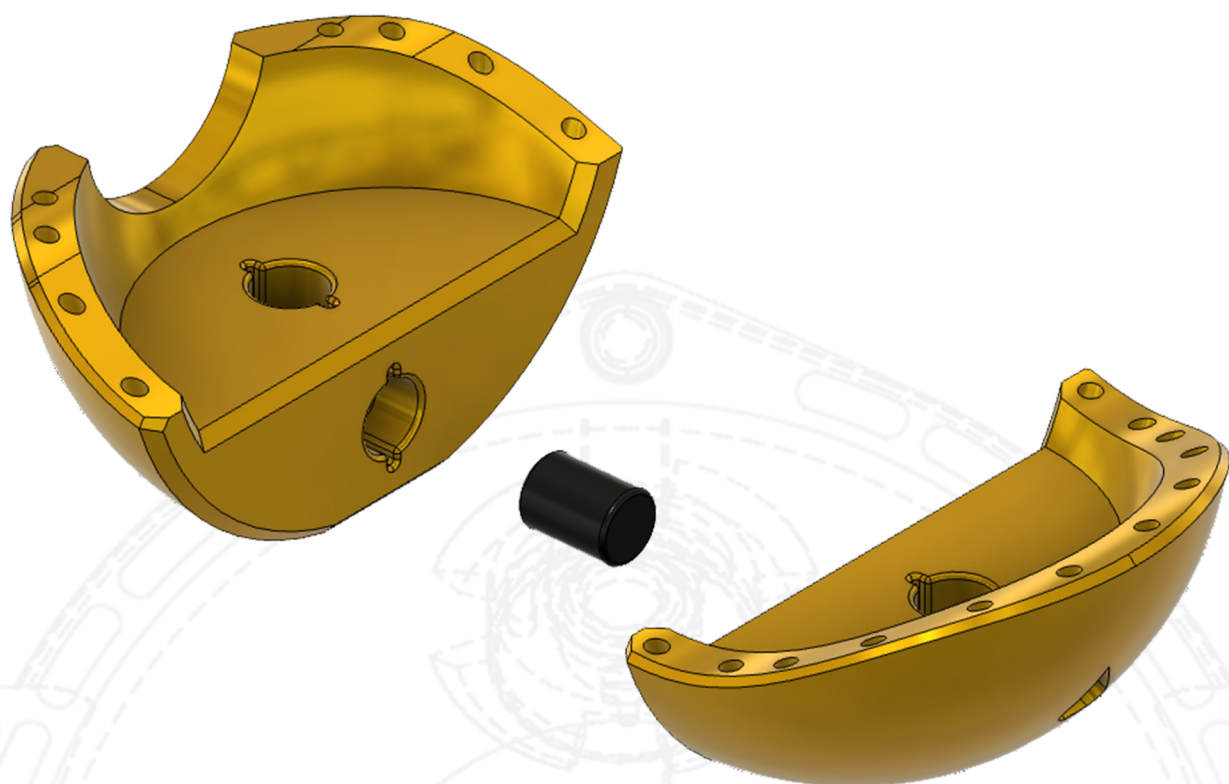


2

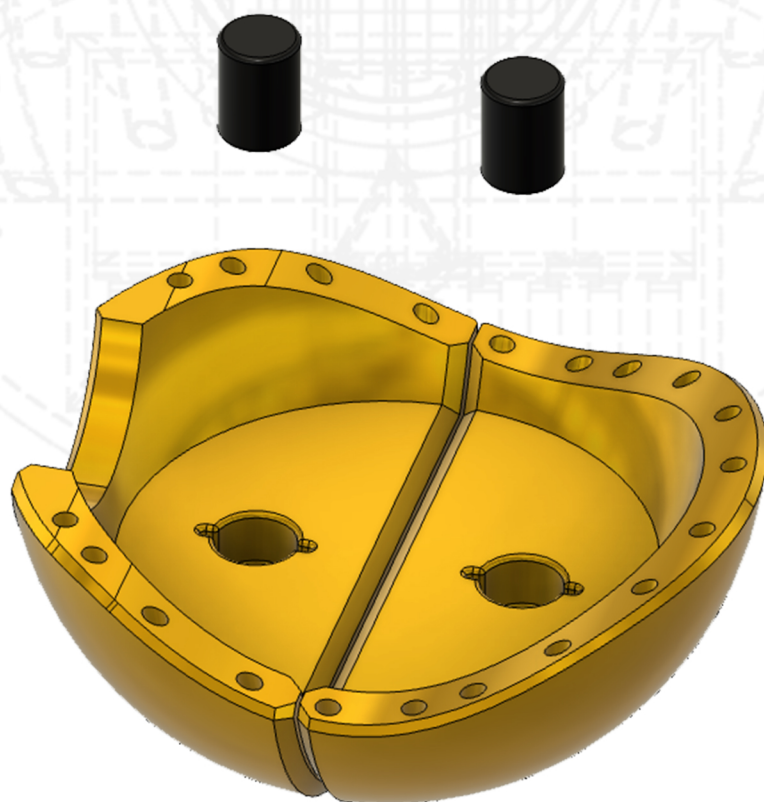


3




4

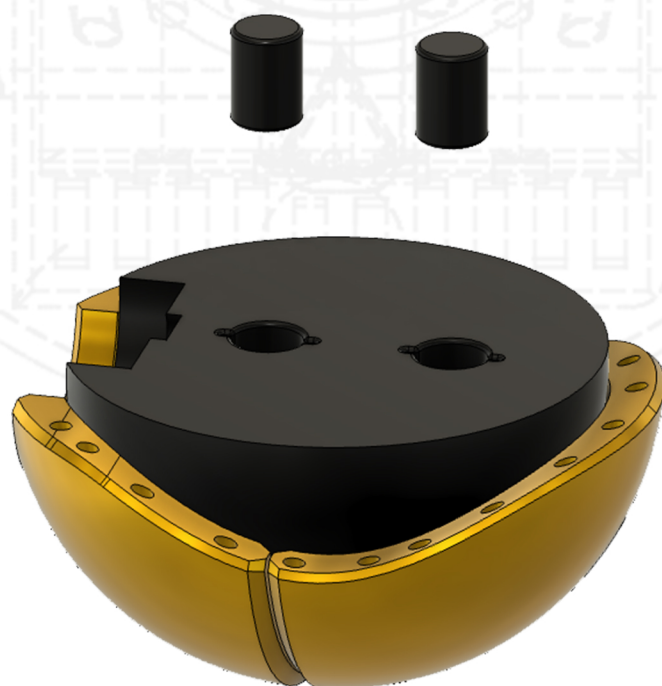

5

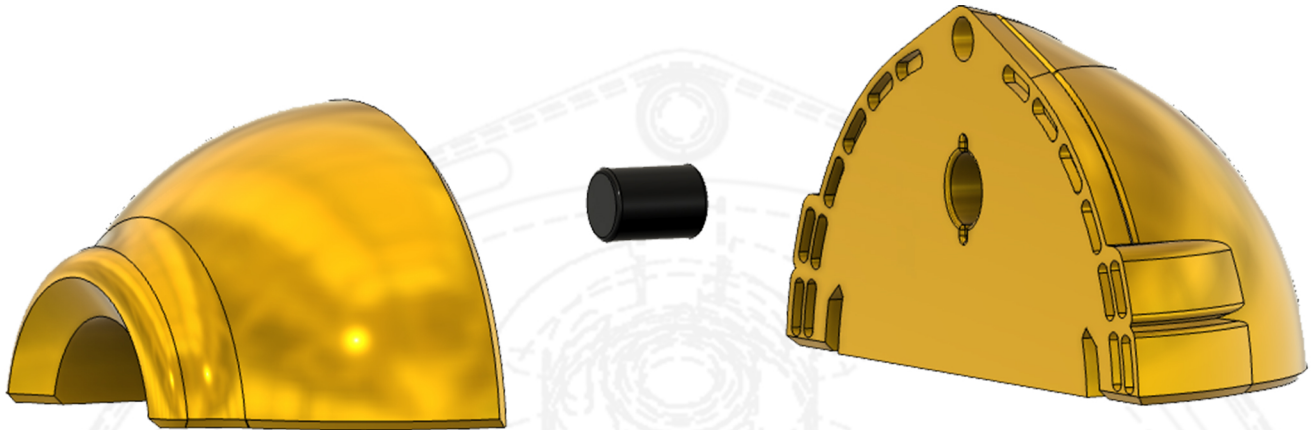

6

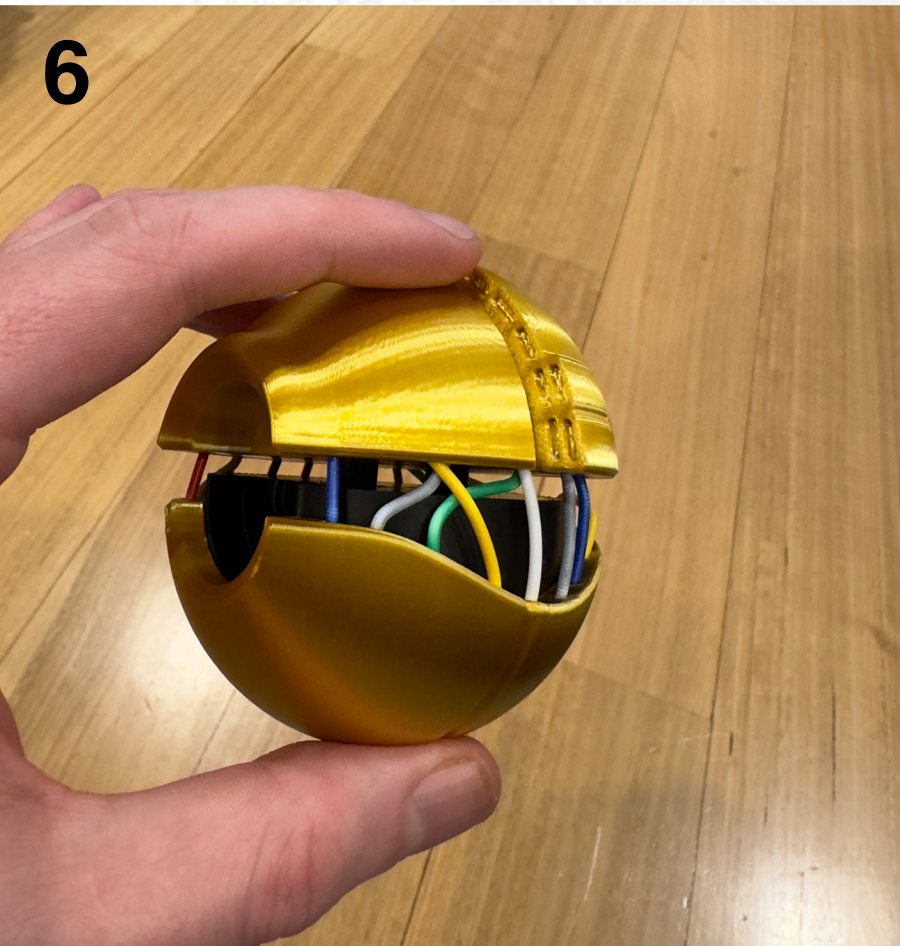

Before inserting filament 'wires':

1. Press top piece onto the pins but do not fully press down.
2. Insert wires and bend as desired.
3. Poke or snap the top ends of the wires into the upper cavity.
4. Firmly press top down to lock everything in place.

***Filament off-cuts of 1.5cm - 3cm work best.**


7



8



9

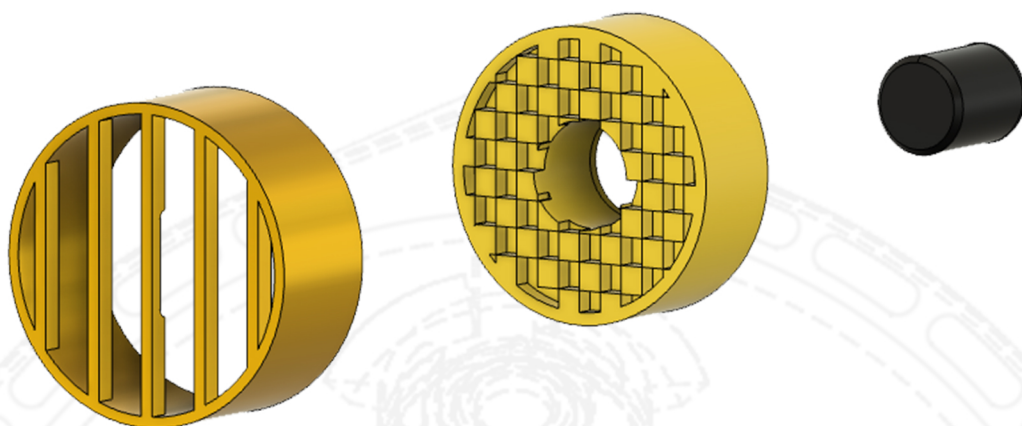

10

