

Premium Bird Feeder House

Assembly Guide

Before You Start

You'll Need

- Super glue (CA glue) or a suitable hard plastic adhesive (*not included*)
- A clean, flat work surface
- **4 × M6 nuts (DIN934)** (*not included*)
- **4 × M6 × 16 hexagon bolts (DIN933)** (*not included*)

Estimated assembly time: 20–25 minutes

Important Information

- Read this guide completely before starting assembly.
 - Test-fit all parts before applying glue.
 - Apply only a **small amount of glue** where required.
 - Keep this guide for future reference.
 - Mounting screws for attaching the bracket to a fence, wall or tree are **not included**.
 - The required **M6 nuts and bolts are not included** and must be supplied by the customer.
-

Step 1 – Install the Windows

Install all **eight window inserts** from the **outside** of the feeder house.

The flange of each window must remain on the **outside** of the model.

The windows are designed for a precise fit but should be secured using a small amount of glue.

We recommend applying a few small drops of glue around each window to secure it in place. Avoid using excessive glue, as it may become visible from the front.

 Photo:



Step 2 – Install the Bird Perch Ring

Place the **bird perch ring** around the outside of the feeder house.

Align the holes in the ring with the matching holes in the feeder body.


Insert one locating pin from the **inside** of the feeder through each hole until it locks the bird perch ring into position.

Repeat this for all **eight locating pins**.

Apply a **small drop of glue** to each locating pin before installation.

The bird perch ring provides a stable landing and feeding area for birds.

 Photo:

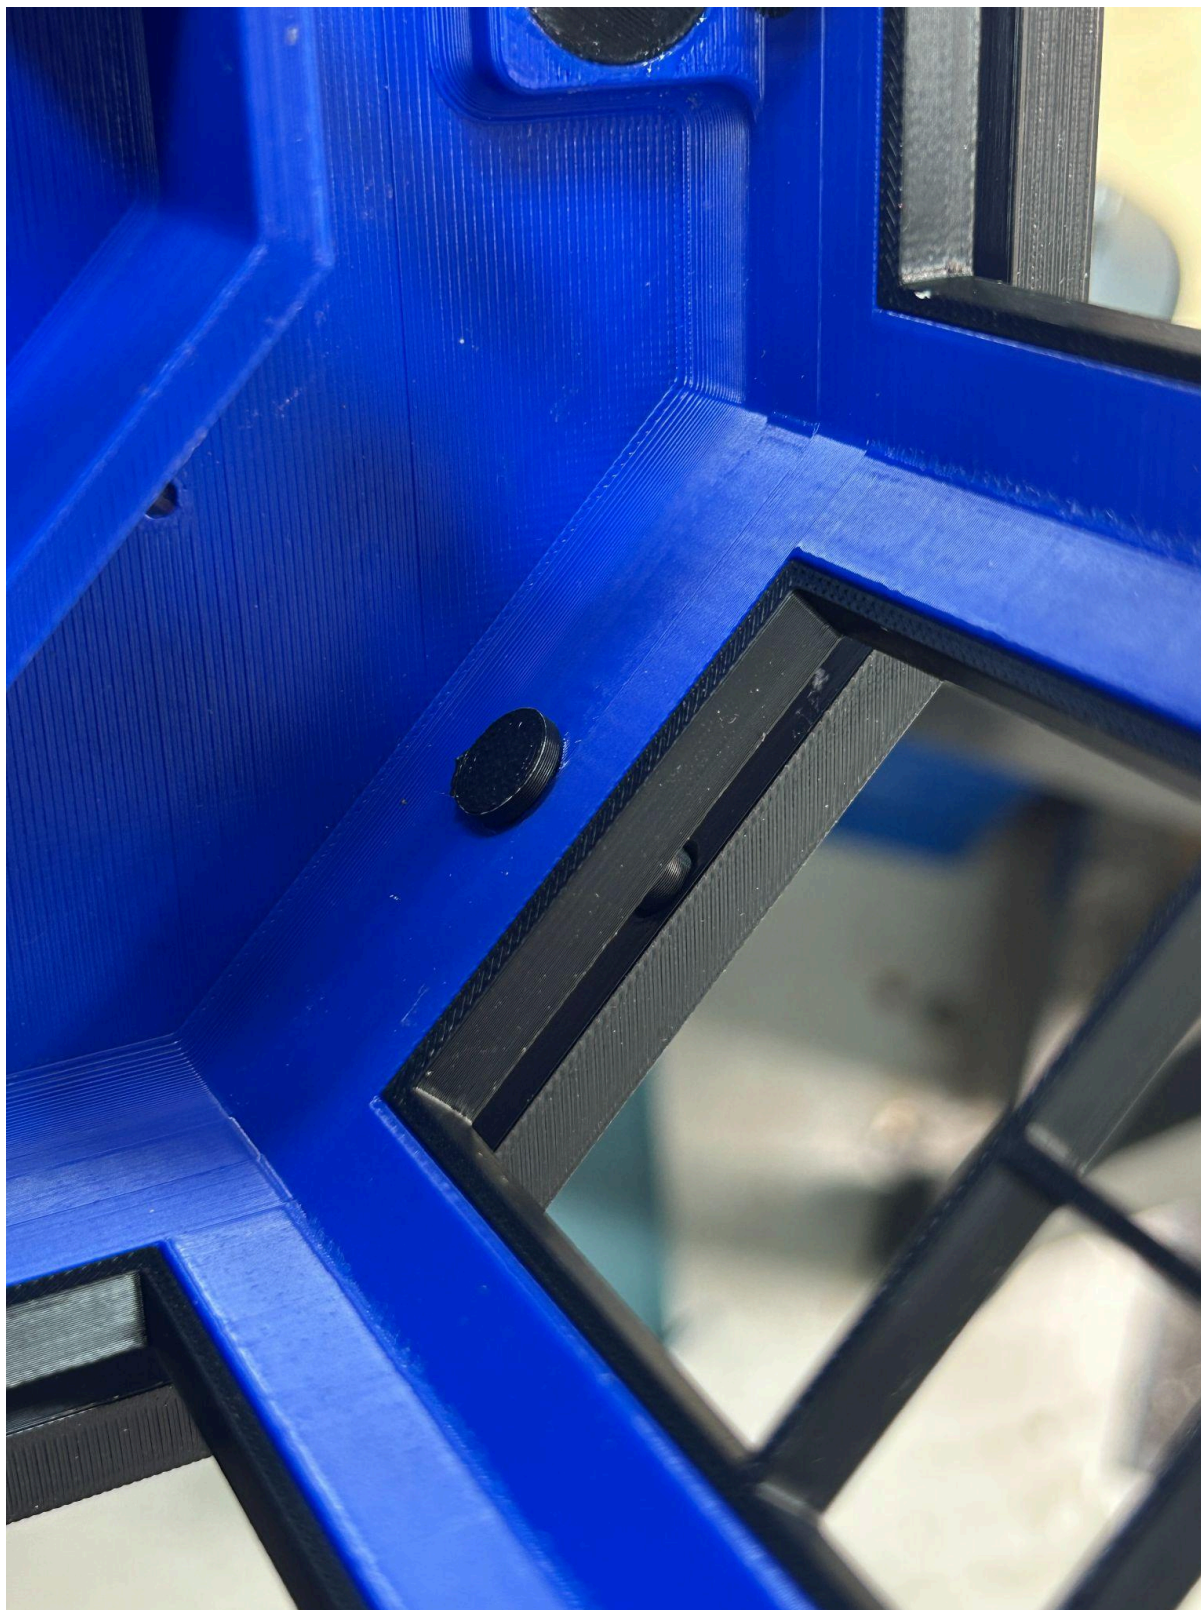

Step 3 – Install the M6 Nuts

Locate the **four hexagonal recesses** in the base of the feeder house.

Insert **one M6 nut** into each recess.

Place one of the supplied printed retaining discs over each nut and glue the disc into position.

This prevents the nut from falling out during assembly and future use.

Important: Ensure that no glue enters the threads of the M6 nut, otherwise the bolt cannot be installed correctly.

M6 nuts are not included.

 Photo:



Step 4 – Install the Roof

Press the roof onto the feeder house from the top.

The roof is designed with a snap-fit connection and should click securely into place.

No glue is required.

The removable roof allows easy cleaning and refilling.

 Photo:



Step 5 – Assemble the Hand Knobs

Insert one **M6 × 16 hexagon bolt** into each printed hand knob.

The hexagonal head of the bolt should fit completely into the hexagonal recess inside the knob.

Once the bolt is fully seated, install the supplied printed retaining cap.

Glue the retaining cap into place.

This locks the bolt inside the hand knob while allowing it to rotate freely.

Repeat this process for all **four hand knobs**.

Important: The M6 bolts are **not included** and must be supplied by the customer.

 Photo:



Step 6 – Install the Mounting Bracket

Secure the mounting bracket to a suitable surface, such as:

- Wooden fence
- Wooden post
- Tree
- Wall

Always use screws suitable for the mounting surface.

Mounting screws are not included.

Step 7 – Attach the Bird Feeder


Place the assembled feeder onto the mounting bracket.

Insert the **four assembled hand knobs** from underneath and tighten them into the installed M6 nuts.

Tighten them by hand until the feeder is securely attached.

Do not overtighten the hand knobs.

 Photo:

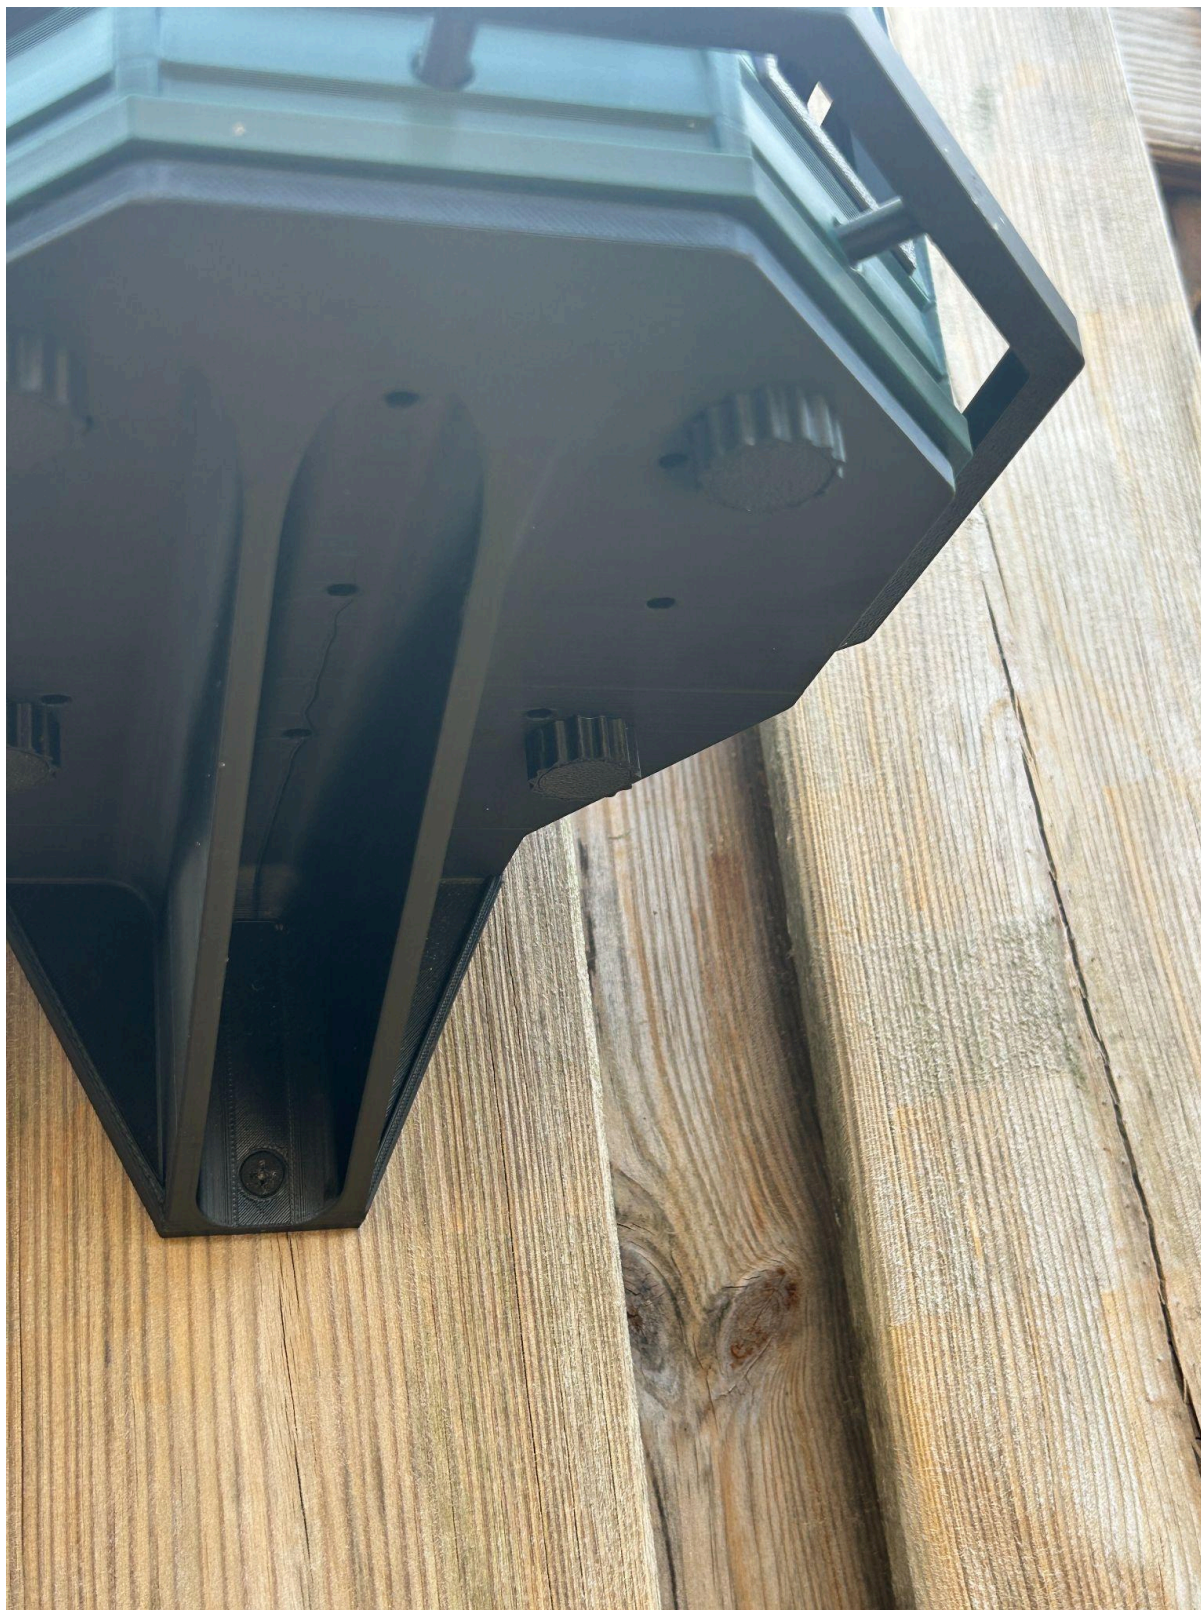

Assembly Complete!

Congratulations!

Your **Techro3D Premium Bird Feeder House** is now ready for outdoor use.

Fill the feeder with suitable bird food and enjoy watching your garden visitors.

For the longest service life, we recommend installing the feeder in a sheltered location whenever possible.

Techro3D

**Engineered with purpose.
Built to last.**

© Techro3D